

SPZ Series

Air-Circulating Disinfectant LED Flat Panel
Installation Instructions

BARRON **TRACE LITE**[®]
commercial & industrial lighting



IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

When using electrical equipment, basic safety precautions should always be followed including the following:

- **DISCONNECT AC POWER SUPPLY BEFORE SERVICING.**
- Installation and servicing of this equipment should be performed by qualified service personnel only.
- Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable.
- Do not mount near gas or electrical heaters.
- Equipment should be mounted in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Any modification or use of non-original components will void the warranty and product liability.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS!


Technical Support ■ (623) 580-8943 ■ technicalsupport@barronltg.com

SPZ Series


Air-Circulating Disinfectant LED Flat Panel Installation Instructions

Panel must be anchored to ceiling


1. Anchor cables to ceiling (anchors and cables provided by others).

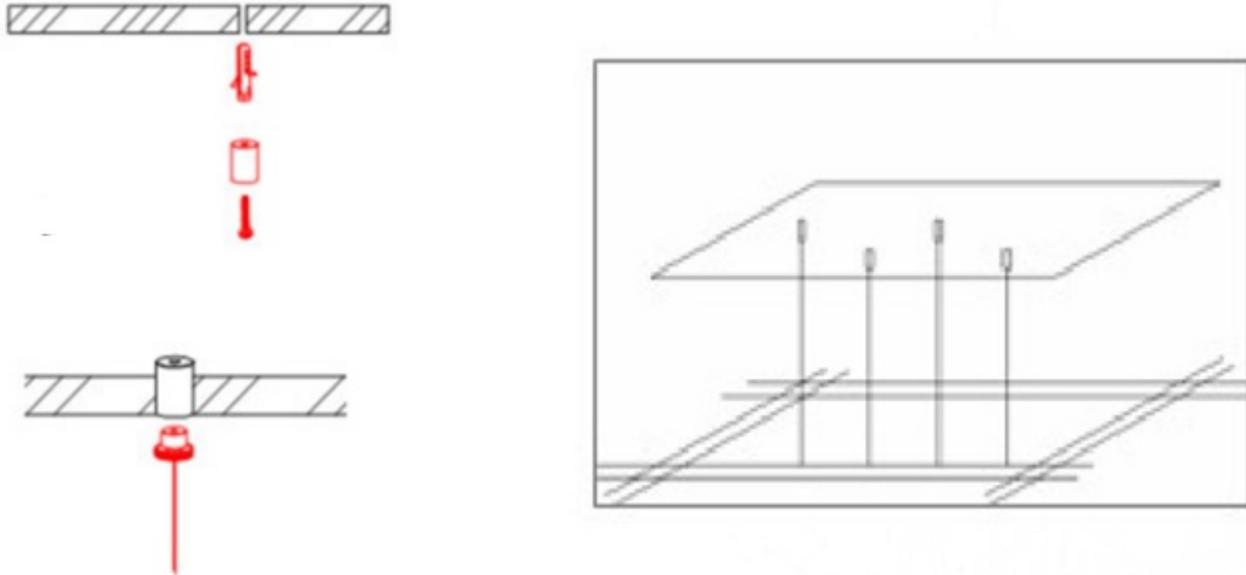

2. Rotate panel 45° and slide it through the ceiling grid.
3. Make electrical connections inside fixture, refer to wiring section.

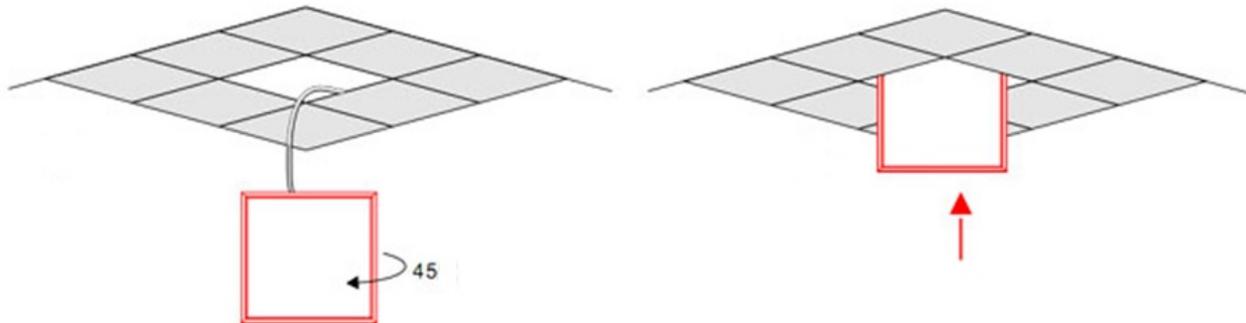

4. Attach cables to panel and place in ceiling grid. Adjust cables to remove slack until fixture is flush with drop ceiling tiles.

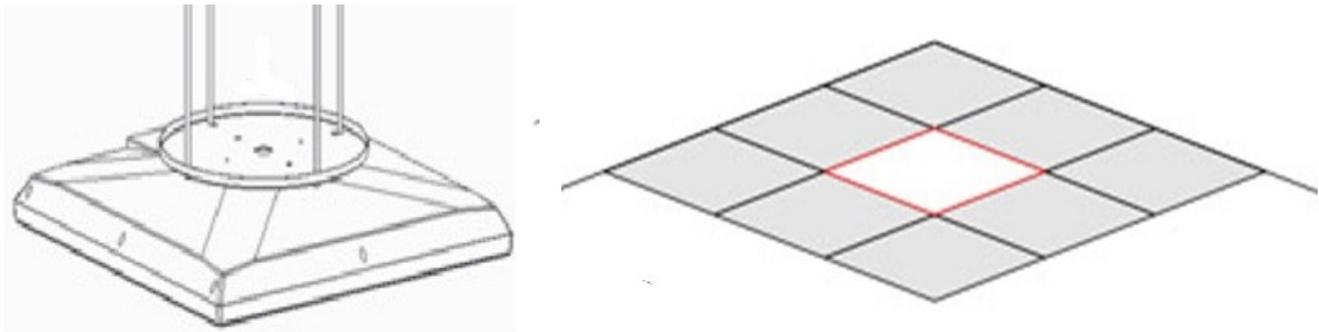


SPZ Series

Air-Circulating Disinfectant LED Flat Panel Installation Instructions

Filter Replacement Detail SFP-RF = Replacement Filters (complete set of four filters)
Replace every 2100 hours or every 5 years (whichever comes first)



Filters snap in place for easy replacement

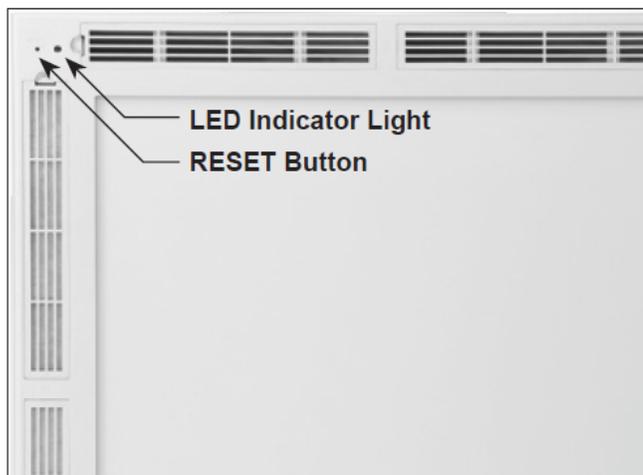

LED indicates when filter change is required



Reset after filter changes


Remote Details



Remote control for independent operation of fan and light.
Remote can operate up to 25 fixtures.
(Included with each fixture)

Switch located on back of fixture enables/disables remote control operation.

Utilizes a23 12v battery (1) - Included

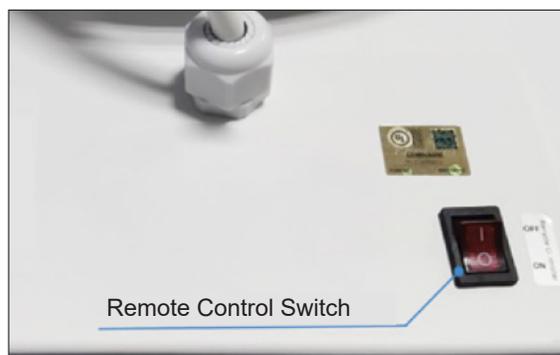

SPZ Series

Air-Circulating Disinfectant LED Flat Panel Installation Instructions


Wiring

Electrical connections should be made inside flat panel.
Cap all unused leads to prevent shorting.

Make electrical connections as follows:

Black - Line
White - Neutral
Green/Yellow Green - Ground

Note: This fixture auto adjusts for voltages from
120VAC-277VAC

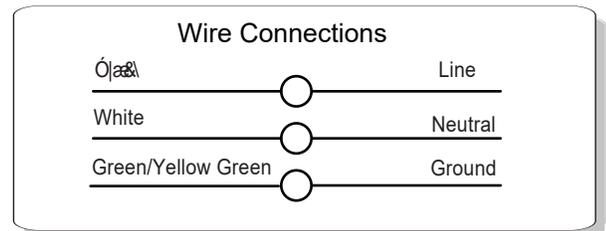

Troubleshooting

If unit does not turn "ON"

1. Check incoming voltage to the LED driver. Must be at least a minimum of 120VAC and no greater than 277VAC.
2. Are all the LEDs on the light engine "OFF"? If so, LED driver may be defective. Using a voltmeter, check to see if voltage is present at the output of the power supply. If low or no voltage, then replace the power supply.
3. If any individual LEDs are "OFF" the LED light engine is defective. Please have the serial number off the light engine available when you contact technical support.
4. If the unit is equipped with a photocell, check the photocell to make sure it's functioning properly.