

VLED-EL90L Series

Installation Instructions

BARRON **EXITRONIX**[®]
emergency lighting



IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

When using electrical equipment, basic safety precautions should always be followed including the following:

- **DISCONNECT AC POWER SUPPLY BEFORE SERVICING.**
- Installation and servicing of this equipment should be performed by qualified service personnel only.
- Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable.
- Do not mount in hazardous locations, or near gas or electrical heaters.
- Do not let power cords touch hot surface.
- Do not use outdoors.
- Equipment should be mounted in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Any modification or use of non-original components will void the warranty and product liability.
- Do not use this equipment for other than intended use.
- Allow battery to charge for 24 hours before first use.

SAVE THESE INSTRUCTIONS!

Technical Support ■ (623) 580-8943 ■ technicalsupport@barronltg.com

VLED-EL90L Series

Installation Instructions

Wall Mount Installation (Fig. 2)

1. Insert a flat blade screwdriver into the two slots to remove front cover from backplate. (Fig 1).
2. Remove the knockout hole on the center of the backplate. Then remove the knockouts on the backplate that correspond to the junction box holes to be used. The knockout holes are easily removed when it is removed from the outside of the backplate.
3. Remove side hole plug from housing, snap lamp heads on the unit and connect to circuit board (Fig. 5)
4. Route AC supply leads through the center hole on the backplate, then make the proper wire connections. Connect the white wire to neutral. If using 120VAC, connect the black wire to the hot lead. If using 277VAC, connect the orange wire to the hot lead. Cap the unused lead. Refer to **Wiring Diagram** section. (Fig. 6)
5. Feed excess wire into junction box and secure backplate to junction box.
6. Attach battery connector to circuit board. (Fig. 2)
7. Snap chevrons to EXIT panel as needed and re-secure faceplate to unit.
8. Adjust the direction of lamp heads for optimal lighting coverage.

Ceiling Mount Installation (Fig. 3)

1. Attach crossbar to junction box, set the crossbar so that the short blade is touching the junction box.
2. Insert a flat blade screwdriver into the two slots to remove front cover from backplate. (Fig 1).
3. If double face is desired, replace backplate with additional face plate provided.
4. Remove the mounting hole cover on the top and side of the unit, assemble the canopy unit. (Fig. 4)
5. Remove side hole plug from housing, snap lamp heads on the unit and connect to circuit board (Fig. 5)
6. Route AC supply leads through the mounting hole on the frame, then make the proper wire connections. Connect the white wire to neutral. If using 120VAC, connect the black wire to the hot lead. If using 277VAC, connect the orange wire to the hot lead. Cap the unused lead. Refer to **Wiring Diagram** section. (Fig. 6)

Fig. 1

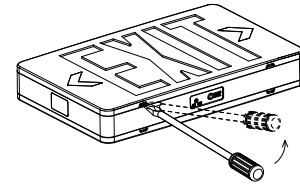


Fig. 2

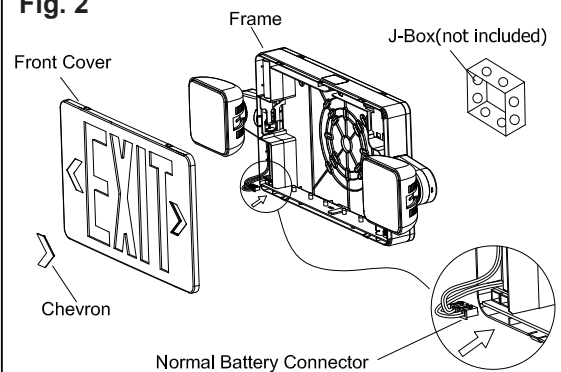


Fig. 3


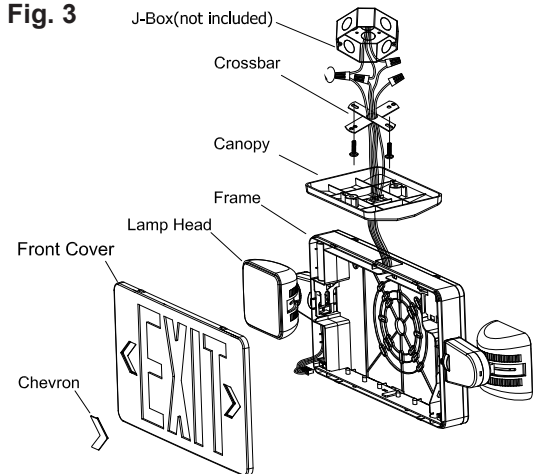


Fig. 4

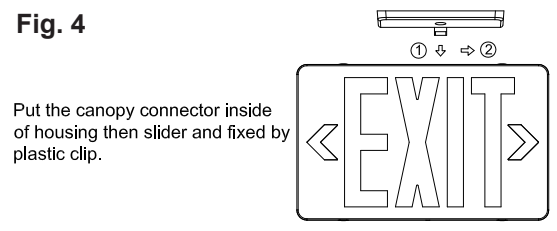


Put the canopy connector inside of housing then slider and fixed by plastic clip.


VLED-EL90L Series

Installation Instructions

7. Fasten crossbar on junction box by screws provided, fasten canopy to crossbar and against the ceiling.
8. Snap chevrons to EXIT panel as needed.
9. Attach battery connector to circuit board, re-secure faceplate to unit. (Fig. 2)
10. Adjust the direction of lamp heads for optimal lighting coverage.

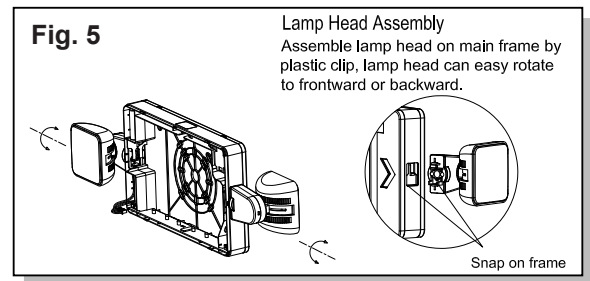


Wiring Diagram (Fig. 6)

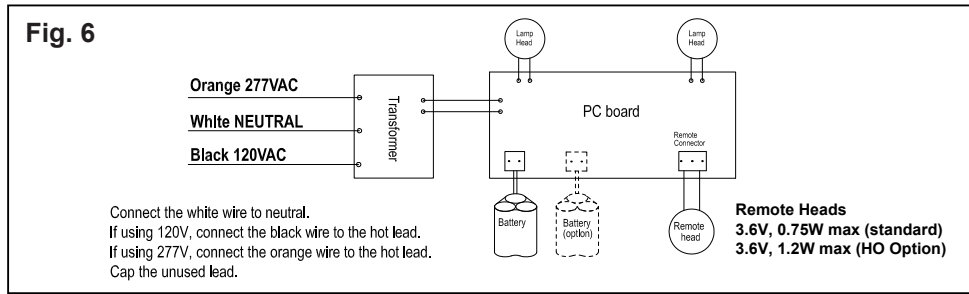

Remote Heads Connection - (Option)

1. Remove jump connector from the female connector on PCBA.
2. Attach the remote male connector into the female connector on PC board.
3. Connect extended remote head wires to the remote wires using wire nuts. Yellow is positive (+) and the purple is negative (-).

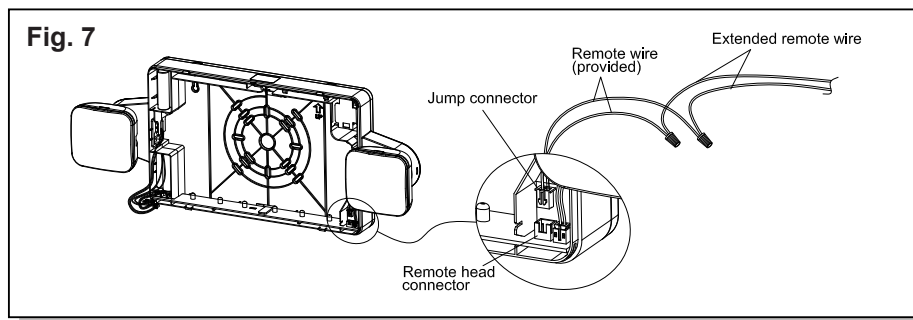

Max. Mounting Height

Model	Height
VLED-EL90L	17 ft

Maintenance

The battery has to recharge if the product is kept in stock over 9 months. We recommend that the equipment is tested regularly in accordance with local codes. Replace the batteries as needed if discharge time does not achieve 90 minutes.

Operation (Standard models)

The battery in this unit may not be fully charged. After electricity is connected to the unit for at least 24 hours, then normal operation of this unit should take effect. To check, press the "TEST" button. The EXIT sign should stay illuminated by battery backup and the LED indicator will be turned off. Release the "TEST" button, LED indicator will be turned on.

In accordance with NFPA 101, your emergency lighting system must be tested monthly for a minimum of 30 seconds and annually for 90 minutes. Refer to your local codes for any additional requirements that may apply.

Testing and Reporting Instructions (G2 and G3/G3PRO models)

- When AC power is supplied to fixture, the unit will automatically initiate a self-test and self-diagnostic test as follows:
 - Verifies battery disconnection, charger board failure at every 5 seconds.
 - 1 minute self-testing every month.
 - 30 minutes self-testing on every 6 months after installation.
 - 90 minutes self-testing on every 12 months after installation.
- Dual color LED lamp indicator shows the following status:
 - Green color: On / Ready
Blinking: Testing
 - Red color: (Service Alert)
 - Service Alert LED Code (Red color LED lamp indicator)

●	One blink ON/pause (4 seconds)	Battery is not connect
●●	Two blinks ON/pause (4 seconds)	Battery voltage too low
●●●	Three blinks ON/pause (4 seconds)	Charger board circuit fault
●●●●	Four blinks ON/pause (4 seconds)	Transfer function failure
●●●●●	Five blinks ON/pause (4 seconds)	Integral lamp fault
●●●●●●	Six blinks ON/pause (4 seconds)	Remote head's emergency lamp fault (option)
●●●●●●●	Seven blinks ON/pause (4 seconds)	Exit LED strip failure

Note: After solving the fault of emergency equipment, please press test button for 2 seconds then release to reset. LED indicator will show green.

- "G2 and G3/G3PRO" models also have a manual test function, press test button as follows:

Press test button once (within 2 seconds)	30 seconds discharge test
Press test button twice (within 2 seconds)	3 minutes discharge test
Press test button 3 times (within 2 seconds)	30 minutes discharge test
Press test button 4 times (within 2 seconds)	90 minutes discharge test
*Press and hold test button for 8 seconds	Fixture will leave network and reset itself

*Note: only applies to "G3/G3PRO" models. If you have problem to initiate provisioning or if you know the unit belongs to other Guardian G3 Network

Networking Operations for "-G3/G3PRO" Models

Model with "-G3/G3PRO" suffix is our world winning design equipped with "wireless testing and reporting" features. Unit that has "-G3/G3PRO" suffix in its model number is capable of joining Guardian G3 emergency lighting management system. It will be part of a large testing system to be tested and report result wirelessly.

Once powered up and commissioning allowed, unit will automatically join Guardian G3 network and get provisioned. Upon the completion of the commissioning, unit will perform testing and report based on set schedules.

For more information about commissioning, configurations and testing, please visit website, <https://barronltg.com/guardian-g3-products.php> for details.

Trouble Shooting Guide

If LED leads or LED indicator does not illuminate, check the following:

- Check AC supply - verify that unit has 24 hours AC supply.
- Check battery connection.
- Discharge the battery and then charge the battery for 24 hours and retest.
- If above trouble shooting hints to not solve the problem, contact factory for assistance.