

The 900E Series exit features an architectural, slim design to fit into any environment. Attractive and functional, the 900E Series is completely self-contained and utilizes reliable, energy-efficient LED illumination.

FEATURES

- Attractive specification-grade aluminum design
- High clarity acrylic panels
- Ceiling recessed, wall recessed, surface ceiling, wall or end mount
- Custom legends available
- 120/277VAC Dual primary, 50/60Hz input
- Low voltage disconnect eliminates deep discharge
- Brownout, short-circuit and voltage surge protection
- Maintenance-free NiMH (G2) and Sealed Lead Calcium (WB) batteries
- Optional Guardian Self-test/Self-diagnostics (G2) available
- Constant, uniform illumination by long-life, high-intensity red or green LEDs
- Fully-illuminated 6" characters with 3/4" stroke
- Field-selectable directional chevrons included for all configurations
- Standard finishes: Black, Brushed Aluminum or White
- Assembled in U.S.A. with global components

WARRANTY

Any component that fails due to manufacturer's defect is guaranteed for 25 years with a separate five year pro-rated warranty on the battery. The warranty does not cover physical damage, abuse or instances of uncontrollable natural forces. See the full Exitronix warranty document for detailed information.

Model: _____ Date: _____
 Accessories: _____
 Job Name: _____ Type: _____



Custom legends available



ORDERING INFORMATION Example: 902E-U-WB-RM-BA-G2

Series	Mounting	Power Source	Panel Color	Finish	Options (Factory Installed)
902E = Single-Face	R = Recessed	LB = AC Only	RC = Red Letters/Clear Panel	BA = Brushed Alum.	DR = Damp Location Rated
903E ¹ = Double-Face	U = Universal Surface	WB = With Battery	RM = Red Letters/Mirror Panel	BL = Black	G2 ⁴ = Self-test/Self-diagnostics
		WR ² = Wall Recessed	2CI1 ³ = 2 Circuit Input 120/120V	RW = Red Letters/White Panel	WH = White
		2CI7 ³ = 2 Circuit Input 277/277V	GC = Green Letters/Clear Panel		G2-230V ^{5,7} = Self-test/Self-diagnostics
		2CI17 ³ = 2 Circuit Input 120/277V	GM = Green Letters/Mirror Panel		G2-240V ^{5,8} = Self-test/Self-diagnostics
			GW = Green Letters/White Panel		IV = Inverted Mount EXIT Panel
Notes					SS ⁹ = Specialty Signs

¹ Double face available with white or mirror panel only

² Single face, clear panels only (RC or GC)

³ 2CI not available with G2 option

⁴ NiMH only

⁵ Available with battery units only, cannot be combined with any other options

⁶ 220V version

⁷ 230V version

⁸ 240V version

⁹ Consult factory for alternate legends and custom configurations

¹⁰ Order as separate line item, surface mount only

Accessories¹⁰ (Field Installed)

ER1-KIT = 1' Pendant Mount Kit

ER2-KIT = 2' Pendant Mount Kit

CONSTRUCTION

Surface Mounting: Engineering grade aluminum extrusion with mounting canopy in either a powder coated or brushed aluminum finish

Recessed Mounting: Galvanized steel enclosure supplied with a trim plate and adjustable bar hanger

Panels - Constructed of high quality clear acrylic for maximum light output. Exit letters are 6" high with a 3/4" stroke. Double-face panels are supplied with a mirror or white separator. Units are supplied with field selectable directional chevrons for all configurations.

ILLUMINATION

Illumination of the 900E Series is accomplished utilizing high-intensity, long-life LEDs. LEDs are a maintenance-free solution, providing up to 100,000 hours of use without failure.

ELECTRICAL

Input

Dual-voltage input 120 or 277VAC @ 50/60Hz.

Sealed Lead Calcium Battery (WB)

Extronix sealed lead calcium batteries are maintenance-free. Lead calcium batteries perform optimally in temperatures ranging from 15°C - 40°C (59°F - 104°F).

Nickel-Metal Hydride - NiMH (With G2 option only)

Extronix NiMH batteries are maintenance-free. NiMH batteries perform optimally in temperatures ranging from 0°C to 40°C (32°F to 104°F).

Emergency

The 900E Series exit will operate for a minimum of 90 minutes during a loss of power with a 24 hour maximum recharge time for the battery.

Two-Circuit Operation (Option: 2C11, 2C17 or 2C117)

Two-Circuit input allows for a primary and auxiliary power source to be connected to the emergency unit that does not contain a battery. Applications include those with inverters or alternate backup power sources.

Brownout Circuit

Brownout circuit monitors the line voltage, as the line voltage sags and can no longer illuminate the exit sign to meet UL 924 visibility test, the emergency circuit will turn on to supply a portion or all the power to illuminate the sign for a minimum of 90 minutes until the line voltage is restored.

Low Voltage Disconnect

Low Voltage Disconnect (LVD) measures the battery terminal voltage. The LVD continuously monitors the battery terminal voltage and if it should fall below a preset voltage threshold, the LVD will disconnect the load. When the battery is recharging and voltage is raised above another preset voltage threshold, the load is automatically reconnected.

Test Button

The test button is easy to locate and provides manual verification of the transfer circuit and emergency lamps.

Solid-State Transfer (G2 option only)

The circuit features solid-state switching for emergency lamps, eliminating concerns of damaged contact or mechanical failures associated with relays. The switching circuit detects a loss of line voltage and automatically switches to emergency mode.

Overload and Short Circuit Protection

The overload monitoring system is a solid-state circuit which monitors the lamp load and disconnects from the battery shall an overload or short circuit occur. The overload current protection eliminates the need for fuses or circuit breakers for the DC load.

INSTALLATION

Installs in minutes with easy-to-read instructions and detailed diagrams. No special hardware or tools necessary. Internally housed components and battery.

Assembled in the U.S.A. with Global Components

Assembled in the U.S.A. with global components and is in full compliance with the American Recovery and Reinvestment Act of 2009 (ARRA) requirements.

OPTIONS

Damp Location Rated (Option: DR)

Damp Location Rated fixture that is normally or periodically subject to condensation of moisture in, on or adjacent to, and includes partially protected locations.

Guardian Self-test/Self-diagnostics (Option: G2)

Operation

The purpose of the Guardian circuit is to provide self-testing and self-diagnostic capabilities to the EXIT sign. The EXIT sign will automatically switch to battery mode every 28 days for a period of 5 minutes and every 6 months for a period of 90 minutes. The EXIT sign will also perform various self-diagnostic tests of the unit. Visual signaling will alert maintenance personnel to a fault of the EXIT sign electronics, battery and/or battery charger. The circuitry continuously monitors the operating condition of the EXIT sign and battery charging circuit/battery supply voltage. Refer to Self-Diagnostic section of this page for fault reporting details.

Indicator LEDs

The EXIT sign is provided with a state-of-the-art pulse charging system for the battery. The yellow LED (STEADY STATE) indicates that the charger is turned off. The red LED (CHARGER ON) indicates that the battery is under full charge. NOTE – the "STEADY STATE" and "CHARGER ON" LEDs will toggle faster with a discharged battery. A fully charged battery will cause the "STEADY STATE" LED to be illuminated longer than the "CHARGER ON" LED. The green "AC ON" LED indicates that normal AC power is being supplied to the EXIT sign. The red "UNIT ALERT" indicates whenever the self-diagnostic system has detected a fault condition.

Test Button Features

- Pressing the "TEST BUTTON" once will switch the unit into battery mode for a period of 2 seconds.
- MANUAL TEST - Pressing the "TEST BUTTON" twice (in rapid succession), will switch the unit to battery mode for a period of 15 minutes. Pressing the "TEST BUTTON" once while the unit is MANUAL TEST mode will cancel the manual test and return the unit to normal AC power.
- RESET – Pressing the "TEST BUTTON" 3 times will reset the red "UNIT ALERT" LED. If multiple faults are present, it may be necessary to repeat this procedure for each remaining fault indicated by the "UNIT ALERT" LED.

Self-Diagnostic Features

Refer to the chart below when the "UNIT ALERT" LED is blinking.

Number of Blinks	Unit Fault	Corrective Action
1	Battery is Disconnected	Check battery connections
2	Battery	Replace battery
3	Not Applicable	Not Applicable
4	Charger	Check battery then consult factory
5	Transfer (AC to DC)	Check battery then consult factory

Inverted Mount EXIT Panel (Option: IV)

The IV option is designed where the panel is inverted to allow the enclosure to be installed on a ledge application.

Custom and Specialty Legends (Option: SS)

Extronix offers a variety of standard specialty signs designed to provide directional or safety information in applications where clear and accurate delivery of information is required.


Examples of specialty legends include:

"X-RAY IN USE" "ON THE AIR"
Restroom Signage "DO NOT ENTER"
"NO SMOKING" "OCCUPIED"
"AREA OF RESCUE ASSISTANCE" with modified accessibility symbol


Custom Legends are also available - please call factory for details with questions.

DIMENSIONS


Surface Mount

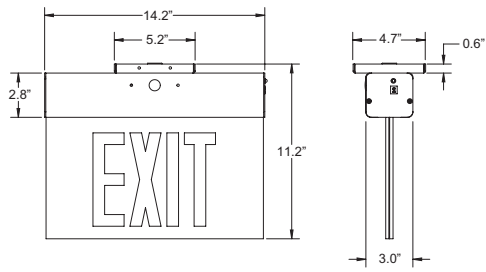

Inverted Mount EXIT Panel

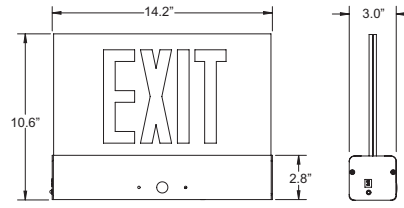

Recessed Mount

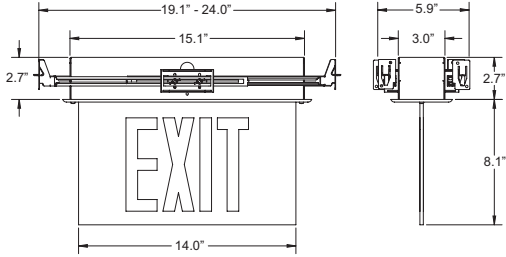

Wall Recessed Mount

