

IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

When using electrical equipment, basic safety precautions should always be followed including the following:

- **DISCONNECT AC POWER SUPPLY BEFORE SERVICING.**
- Installation and servicing of this equipment should be performed by qualified service personnel only.
- Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable.
- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Any modification or use of non-original components will void the warranty and product liability.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS!

The SCP-S LED Canopy light is designed to be mounted to a recessed junction box in the ceiling, walls or pendant mounted using optional pendant mount adapter (supplied by others). Please consult your lighting designer for installation guidance.

Note: The SCP-S is not designed to be wired using surface mounted conduit and is intended for installations under canopy structures.

1. Remove the (4) corner screws to detach the cover plate and unplug the rubber boot electrical harness connector. (Fig. 1)
2. Remove the necessary knockouts and mount the backplate to the junction box using the provided foam gasket and appropriate hardware (provided by others) for this application. (Fig. 2)

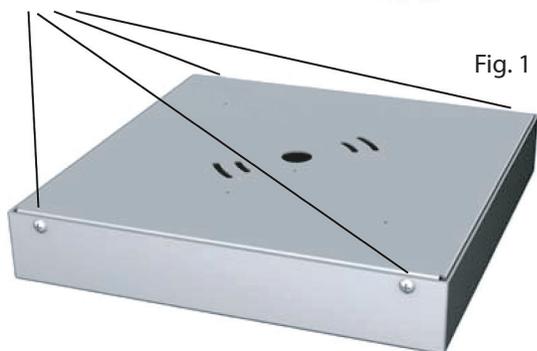


Fig. 1

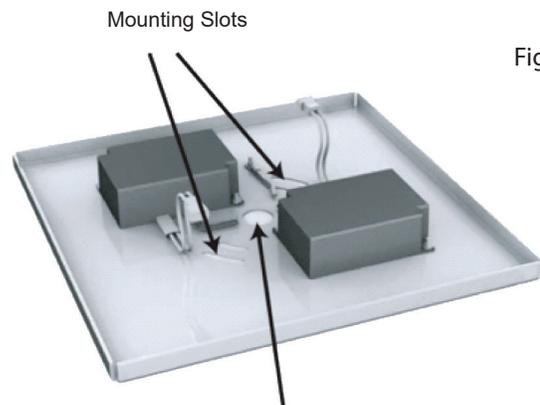


Fig. 2

Electrical wire opening or pendant mount hole.

3. Electrical connections should be made inside junction box as follows:

- Black - Line
- White - Neutral
- Green - Ground

Note: This fixture auto adjusts for voltages between 120VAC - 277VAC.

4. Connect the LED driver harness(es) to the LED light engine and ensure that the rubber boot connectors are firmly attached. (Fig. 3)

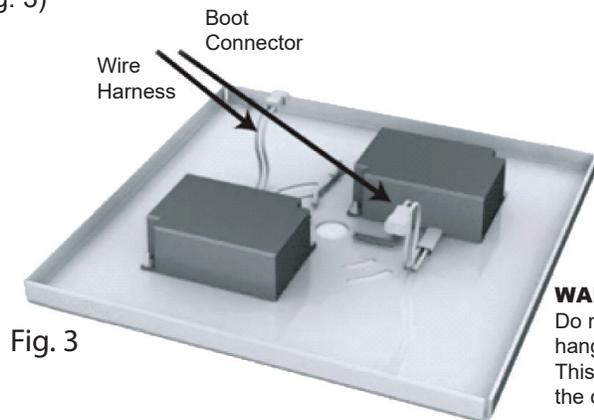


Fig. 3

WARNING!

Do not allow the fixture to hang from the wire harness. This may cause damage to the circuit.

5. Mount bottom enclosure to the cover plate with (4) screws.

OPERATION

The SCP-S requires no special handling, power ON or power cycle requirements. We recommend routine inspections to visually verify the fixture is ON and emitting light. Refer to the troubleshooting guide for any unit not functioning correctly.

TROUBLESHOOTING

If the SCP-S does not turn ON:

1. Check incoming voltage to the LED driver. Must be at least a minimum of 120VAC and not to exceed 277VAC.
2. If all LEDs on the engine are OFF, LED driver may be disconnected. Ensure driver(s) are secure. If secure, use voltmeter to check voltage is present at the output of the power supply. If low or no voltage, consult factory.
3. If some, but not all LEDs are working consult factory for additional technical support. Please have the catalog number and photos available when contacting technical support.

IMPORTANT SAFEGUARDS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.


When using electrical equipment, basic safety precautions should always be followed including the following:

- **DISCONNECT AC POWER SUPPLY BEFORE SERVICING.**
- Installation and servicing of this equipment should be performed by qualified service personnel only.
- Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable.
- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not be readily subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Any modification or use of non-original components will void the warranty and product liability.
- Do not use this equipment for other than intended use.

SAVE THESE INSTRUCTIONS!

The SCP-R Recessed Canopy light is designed to be recessed mounted in ceilings or enclosed canopies. Please consult your lighting designer for installation guidance. Ensure that your opening is no larger than 12" x 12" no smaller than 9" x 9" and at least 5' deep.


1. Open the wireway cover by removing the (4) screws. Feed supply wires through prepunched knockout and secure with fitting or bushing (supplied by others) per local code. (Fig.1)
2. The fixture is supplied with a safety harness. Attach the harness to the opening to support the fixture for ease while wiring. After the wiring and installation is complete, leave the safety harness securely in place. (Fig. 1)

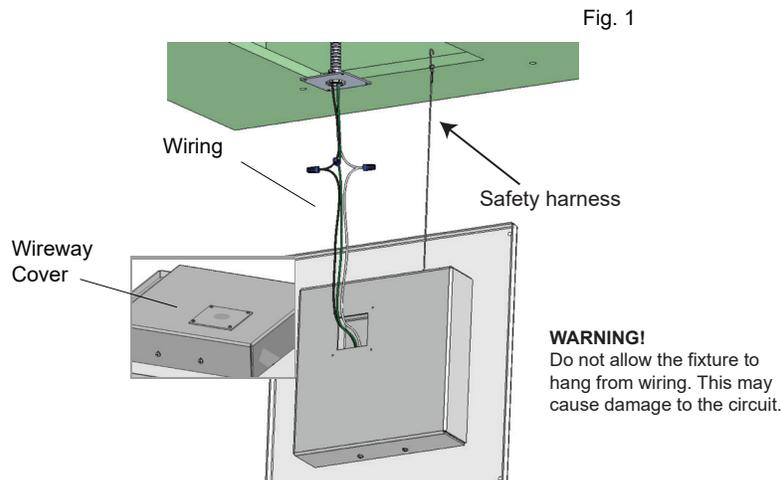


3. Electrical connections should be made inside the wireway cover. Cap all unused leads to prevent shorting.
Note: This fixture auto adjusts for voltage between 120VAC - 277VAC.

Black - Line
White - Neutral
Green - Ground

4. To secure the wireway cover, retighten the (4) screws. Make sure no wires are being pinched during this process and the gasket is set. (Fig. 2)

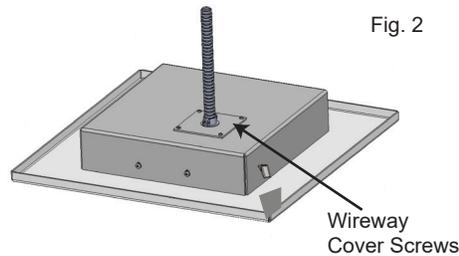

5. Align the fixture's trim plate to the opening and secure using appropriate anchors and hardware. (supplied by others) (Fig. 3)

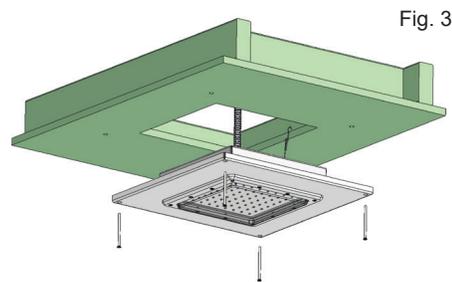

IMPORTANT

For outdoor weatherproof installation: Apply sealant across top edge of canopy to prevent water from reaching the back of the enclosure.

OPERATION

The SCP-R requires no special handling, power ON or power cycle requirements. Routine inspections are recommended to visually verify the fixture is ON and emitting light. Refer to the troubleshooting guide for any unit not functioning correctly.

TROUBLESHOOTING

If the SCP-R does not turn ON:

1. Check incoming voltage to the LED driver. Must be at least a minimum of 120VAC and not to exceed 277VAC.
2. If all LEDs on the engine are OFF, LED driver may be disconnected. Ensure driver(s) are secure. If secure, use voltmeter to check voltage is present at the output of the power supply. If low or no voltage, consult factory.
3. If some, but not all LEDs are working consult factory for additional technical support. Please have the catalog number and photos available when contacting technical support.